
ANKER SOLIX / Anker SOLIX E10
QUICK START GUIDE

For User Guide / App / Support

support@ankersolix.com
(US/Canada) +1 (800) 988 5541

1 System Overview

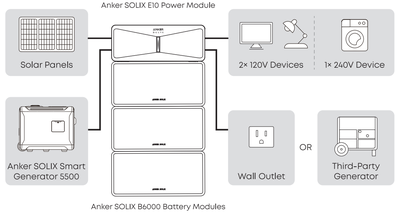


This diagram shows the system that directly powers 120V and 240V devices.
For more system overviews, see the online user guide.

2 Unboxing

In the Power Module Box			In the Battery Module Box
Anker SOLIX E10 Power Module	Fixed Bracket		Anker SOLIX B6000 Battery Module
120V AC Charging Cable	240V Output Cable	Screw (M5 18 mm) ×6	Screw (M5 18 mm) ×2
Expansion Screw (M6 50 mm) ×2	Wrench for Removing PV Connectors	Documents	Document


3 Product Overview

Anker SOLIX E10 Power Module

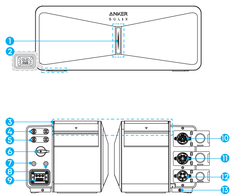

① Light Bar
② Battery Port
③ Handle
④ PV Connector Ports for PV Input 1
⑤ PV Connector Ports for PV Input 2
⑥ PV Switch
⑦ IoT Button
⑧ Power Button
⑨ DC Input Port
⑩ AC Input / Output Port
⑪ AC Output Port
⑫ AC Input Port
⑬ Ground Terminal

Anker SOLIX B6000 Battery Module

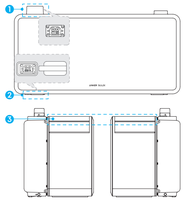


① Battery Port
② Battery Port with Rubber Plug
③ Handle

4 Light Guide

Color Indicates Working Status.		
	Solid White	AC Output Off
	Solid Blue	AC Output On
	Flashing Blue	Networking
	Running From Bottom to Top	Recharging
	Flashing Red	Malfunction


Length Indicates Battery Level.
0-20% | 20-40% | 40-60% | 60-80% | 80-100%




For detailed light indications, refer to the online user guide.

5 Pre-Installation

⚠
- Ensure the installation site has solid, stable ground that is not soft, spongy, or prone to settling. The site must be higher than any historically recorded water level and away from low-lying areas where water or snow may accumulate.
- If installing the modules in an area with heavy vegetation, regularly remove weeds and reinforce the ground beneath the modules with cement or gravel.

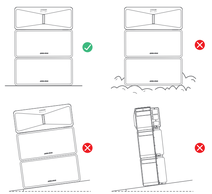


Floor Mounting
Refer to this guide.

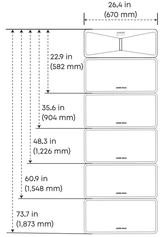


5 Battery Modules Max

More Mounting Options
Refer to the accessory guide.

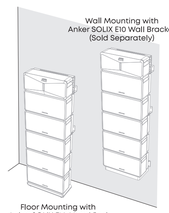

Tools Not Provided




6 Installation


When moving the modules by hand, wear protective gloves to prevent injuries.

1 Place the Bottom Battery Module

- On a flat hard surface.
- Within Wi-Fi coverage.
- 1.2 to 3.1 in (30 to 80 mm) away from the wall.

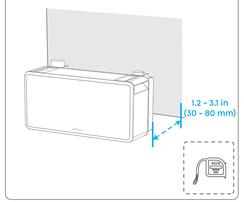


2 Stack Battery Modules

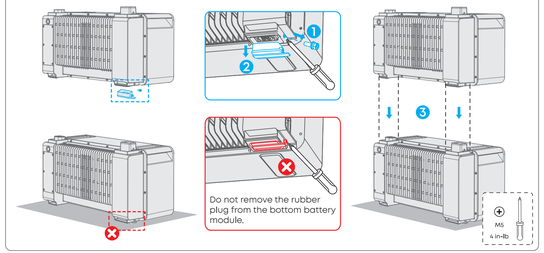


3 Install the Fixed Bracket to Wall Studs

- 1 Battery Module: No bracket is required.
- 2 - 3 Battery Modules: Install one bracket on the top battery module.
- 4 - 5 Battery Modules: Install two brackets (recommended)—one on the top battery module and one on the third battery module.

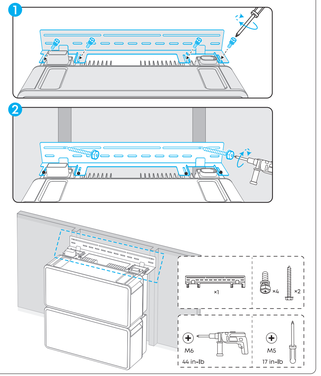


4 Mount the Power Module

Mount the power module on top by aligning the corresponding ports.

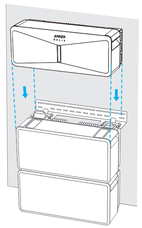

Be cautious to avoid injury when mounting the power module.

5 Lock Modules

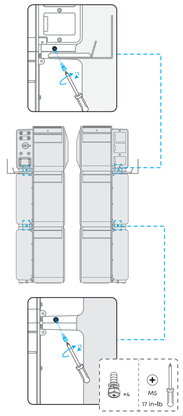


7 Device Setup

Before first-time use, complete setup in the app to activate your power module.

1 Power On

Press the power button for 3 seconds to turn on the power module. Then, the power module will automatically enter networking mode.

- To turn off the power module, press the power button for 3 seconds.
- Using the power button to turn on/off applies to systems without Anker SOLIX Smart Inlet Box.

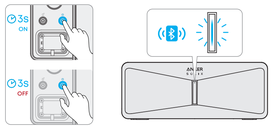

2 Use the Anker App

1. Download and install the Anker app. Then, sign in or create an account.

Anker


GET IT ON Google Play

Google Play and the Google Play logo are trademarks of Google Inc.

Download on the App Store


Apple and the Apple logo are trademarks of Apple Inc.

2. Add your device.
Follow the in-app instructions to complete the setup.

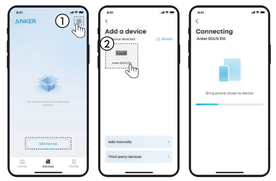


8 Recharge Your Battery Modules

From a Wall Outlet

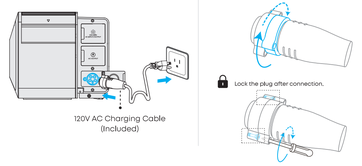


From Solar Panels




High-Voltage PV Connection
If your power module connects to a PV system (over 165V) on or in a building, NEC requires a rapid shutdown function to protect emergency personnel from electric shock.

From Anker SOLIX Smart Generator 5500

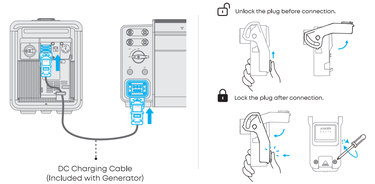

From a Third-Party Generator




9 Power Your Devices

Make sure the power module is turned on before powering your devices.


For Normal Use

1. Connect the 120V / 240V power strip to the power module.
2. Open the power strip cover.
3. Turn on the power strip switch.
4. Press the power button to enable AC output.
The light bar will turn blue, indicating that the power module has started to power your devices.

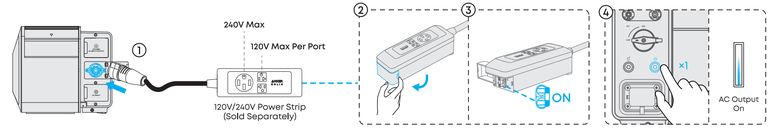

For Use in a Grid Outage

1. Connect the 240V output cable to the power module.
2. Connect the 240V output cable to the transfer switch.
3. Press the power button to enable AC output.
The light bar will turn blue, indicating that the power module has started to power your devices.

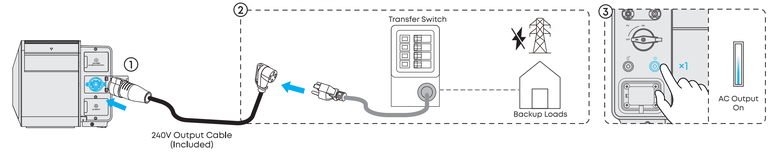

S1005006128 V1


ANKER SOLIX / Anker SOLIX E10 GUÍA DE INICIO RÁPIDO

Para la guía del usuario / App / Asistencia

support@ankersolix.com


(EE. UU./Canadá) +1 (800) 988 5541

1 Descripción general del sistema

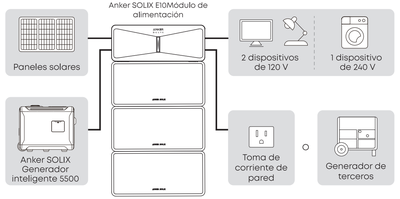


Este diagrama muestra el sistema que alimenta directamente dispositivos de 120 V y 240 V. Para más información sobre el sistema, consulta la guía de usuario en línea.

2 Desembalaje

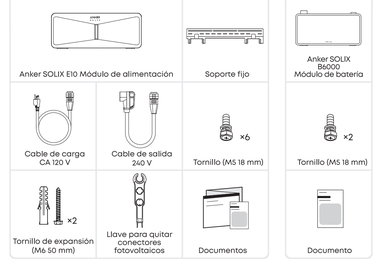


3 Descripción general del producto

Anker SOLIX E10 Módulo de alimentación

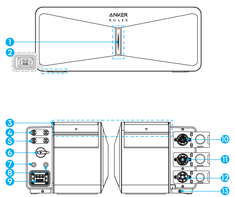


① Barra de luz
② Puerto de batería
③ Manija
④ Puertos conectores FV para entrada FV 1
⑤ Puertos conectores FV para entrada FV 2
⑥ Interruptor FV
⑦ Botón IoT
⑧ Botón de encendido
⑨ Puerto de entrada de CC
⑩ Puerto de entrada/salida CA
⑪ Puerto de salida CA
⑫ Puerto de entrada CA
⑬ Terminal de tierra

Anker SOLIX B6000 Módulo de batería

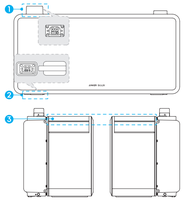

① Puerto de batería
② Puerto de batería con tapón de goma
③ Manija

4 Guía de luz

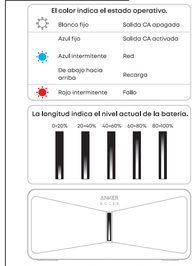


Para obtener indicaciones de luz detalladas, consulta la guía del usuario en línea.


5 Preinstalación

⚠ · Asegúrese de que el sitio de instalación tenga un terreno sólido y estable, que no sea blando, esponjoso ni propenso a asentamientos. El sitio de instalación debe estar a un nivel superior al de cualquier nivel de agua registrado históricamente y lejos de zonas bajas donde puedan acumularse agua o nieve.

· Si instalan los módulos en una zona con abundante vegetación, elimine las malas hierbas con regularidad y refuerce el terreno debajo de los módulos con cemento o grava.

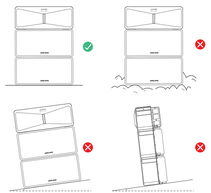

Montaje en suelo
Consulte esta guía.

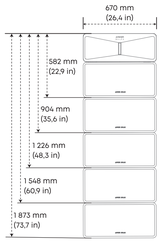

Máximo 5 módulos de batería

Más opciones de montaje
Consulta la guía de accesorios.



Herramientas no incluidas




6 Instalación


Al mover los módulos a mano, usa guantes de protección para evitar lesiones.

1 Colocar el módulo de batería inferior

- Sobre una superficie plana y dura
- Dentro de la cobertura Wi-Fi
- De 30 a 80 mm de distancia de la pared

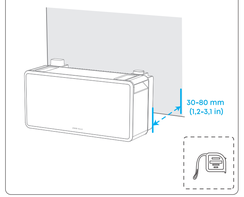


2 Apilar módulos de batería

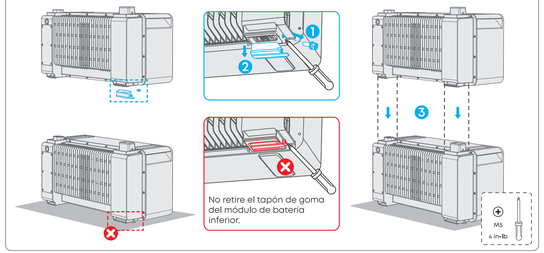


3 Instale el soporte fijo en los montantes de la pared

- **1 módulo de batería:** no es necesario ningún soporte.
- **2 - 3 módulos de batería:** instale un soporte en el módulo de batería superior.
- **4 - 5 módulos de batería:** instale dos soportes (recomendado), uno en el módulo de batería superior y otro en el tercer módulo de batería.

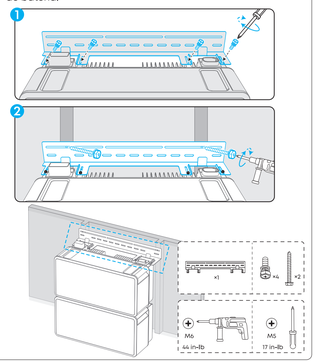


4 Monte el módulo de potencia

Monta el módulo de potencia arriba alineando los puertos correspondientes.

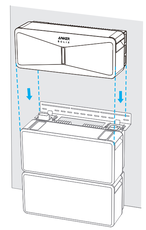

Ten cuidado para evitar lesiones al montar el módulo de potencia.

5 Bloquear módulos

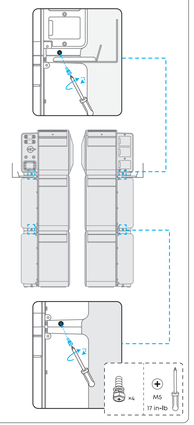


7 Configuración del dispositivo

Antes del primer uso, completa la configuración en la app para activar tu módulo de potencia.

1 Encendido

Mantén presionado el botón de encendido durante 3 segundos. Después, el módulo de potencia pasará automáticamente al modo de conexión en red.


· Para apagar el módulo de potencia, mantenga presionado el botón de encendido durante 3 segundos.
· El uso del botón de encendido para encender/apagar se aplica a sistemas sin caja de entrada inteligente Anker SOLIX.

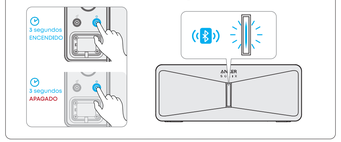

2 Utilice la aplicación Anker


1. Descarga e instala la app de Anker. Inicia sesión o crea una cuenta.

2. Agrega tu dispositivo.
Sigue las instrucciones de la app para completar la configuración.

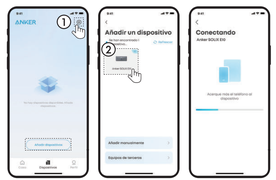


8 Recargar tus módulos de batería

Desde toma de pared

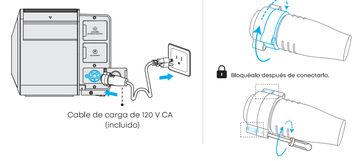

Desde paneles solares

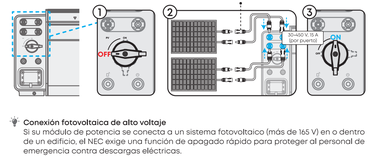

Conexión fotovoltaica de alto voltaje
Si su módulo de potencia se conecta a un sistema fotovoltaico (más de 165 V) en o dentro de un edificio, el NEC exige una función de apagado rápido para proteger al personal de emergencia contra descargas eléctricas.

Desde el generador inteligente 5500 de Anker SOLIX



Desde un generador de terceros




9 Alimentar tus dispositivos

Asegúrate de que el módulo de potencia esté encendido antes de alimentar tus dispositivos.

Para uso normal

1. Conecta la regleta 120 V / 240 V al módulo de potencia.
2. Abre la tapa de la regleta.
3. Enciende el interruptor de la regleta.
4. Presiona el botón de encendido para activar la salida CA.
La barra de luz se volverá azul, lo que indica que el módulo de potencia ha comenzado a alimentar tus dispositivos.

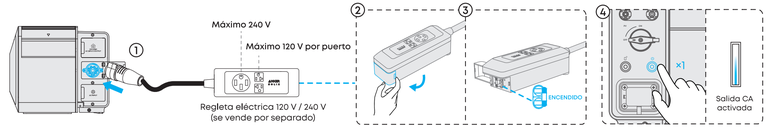

Para uso en caso de corte de red

1. Conecta el cable de salida 240 V al módulo de potencia.
2. Conecta el cable de salida 240 V al interruptor de transferencia.
3. Presiona el botón de encendido para activar la salida CA.
La barra de luz se volverá azul, lo que indica que el módulo de potencia ha comenzado a alimentar tus dispositivos.

