


Tool-less Rail Connector 44-X

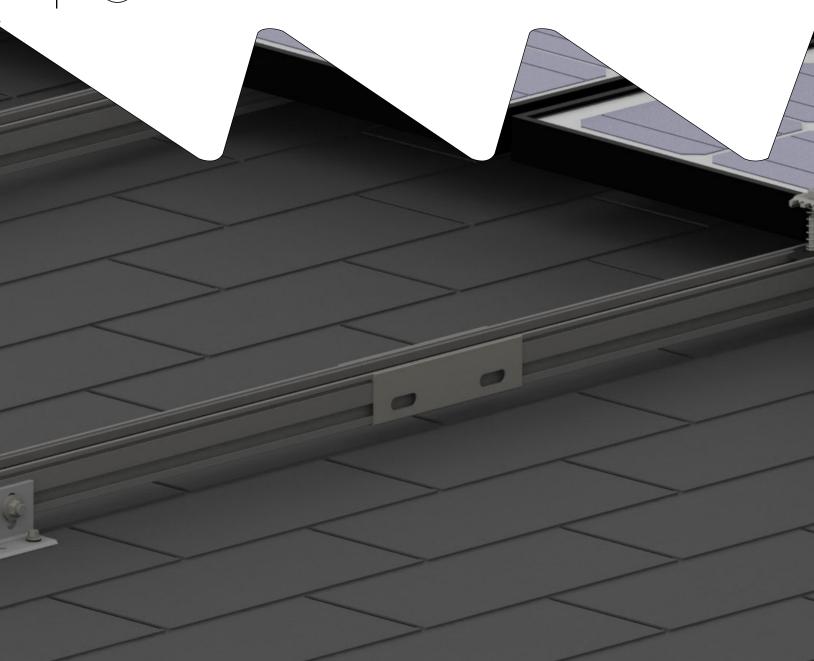




Components








Tool-less Rail Connector, 44-X

Assembly

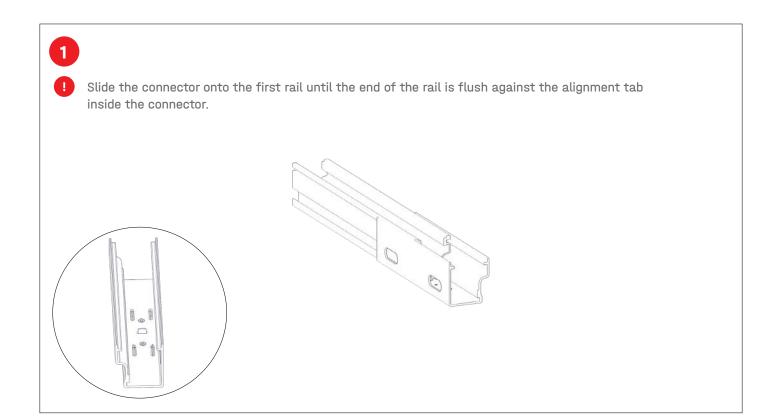





2


Slide the second rail into the connector until the end of the rail is resting flush against the alignment tab. This will ensure the Tool-Less Rail Connector is centered between both rails and the bonding teeth are in contact with the bottom of each rail. No T-bolts are needed if the rail connector is installed between roof attachments, the installation is complete.

Note: The product installation and uninstallation is limited to a maximum of five times.

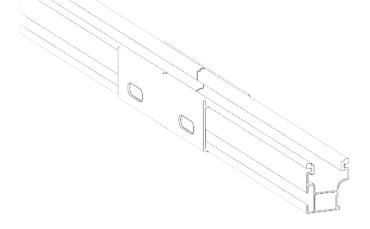


If using the Rail Connector to cantilever past the outer roof attachments on an array, install one T-bolt into each slot of the rail connector and into the side channel of each CrossRail (Two total). Turn the T-Bolt clockwise ensuring that the mark at the end of the shaft is vertical. Using a 13mm socket, tighten to 25.8 ft-lbs.

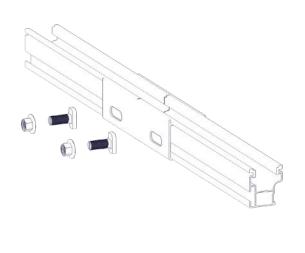

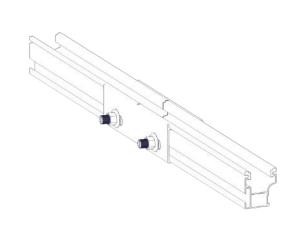



Connecting Strength

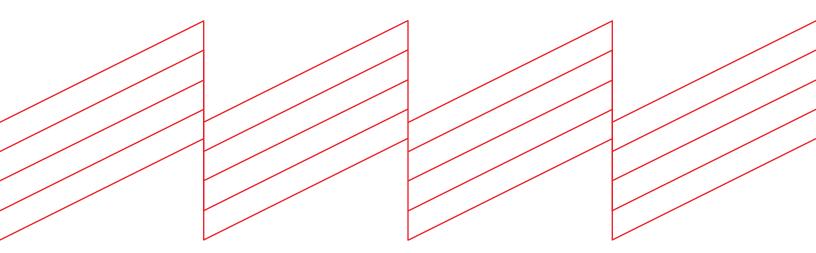

K2 Systems, LLC

4665 North Ave. Suite I • Oceanside, CA 92056 • USA +1.760.301.5300 • infous@k2-systems.com www.k2-systems.com